

KL1O



Private Function - Installation and Operating Instructions

SPECIAL NOTES

Please read carefully:

- Before installing the lock, familiarise yourself with the installation and operating instructions.
- The factory preset combination is 0-0-0-0.
- Your KitLock is supplied ready to fit to doors up to 19mm (3/4") thick.

 
FITTING INSTRUCTIONS

The KitLock can be fitted to cabinets, cupboards and lockers etc. as a direct replacement for existing cam locks. It can also be fitted easily to cupboards and cabinets that do not have an existing locking device.

Fixing Pack A Default Supply




3 Straight cam x 1
4 Screw x 1



Fixing Pack B Optional Additional Fixings

 1 Metal Clip x 1 2 Screws x 2





INSTALLATION GUIDE

A Replace existing cam lock with KitLock

- Step 1 Remove existing cam lock.

 Step 2 Fit the KitLock to the door, passing the spindle through the existing hole.

 Step 3 Now secure the lock by threading the hex nut onto the spindle.

 Step 4 Fit cam and secure with screw.

 Step 5 Now check the operation of the lock using the
- Step 6 If the lock is functioning correctly, change the code using the instructions overleaf.

factory preset combination 0-0-0-0.

B New Installation

- $\textbf{N.B.} \ \, \textbf{Optional Fixing Pack B} \ \, \textbf{(above) may be required}.$
- Step 1 Mark a position at a suitable distance from the door edge, ensuring enough clearance for the cam to work.
- Step 2 Using the 'Typical Door Prep.' dimensions (see overleaf), drill a hole to suit..
- Step 3 Continue installation from step 2 to 6, left.

CHANGING THE CODE

- 1 With the indicator in the open position, turn the dials to the factory preset combination 0-0-0-0. Note: If you have already changed the code, use your current combination for this step.
- **2** Depress the Reset Button fully and hold, turn the dials to your desired combination.

Note: Do not let go of the Reset Button while setting vour combination.

3 Release the Reset Button after checking your combination is correct.

Note: The outer casing will turn freely between the open and locked position until the combination has been scrambled.

HOW TO USE YOUR LOCK


- 1 Once you have chosen and set your combination, turn the outer casing so the indicator is in the locked position.
- 2 Make a note of your chosen combination and scramble the dials. The lock is now locked.
- **3** To reopen, rotate the dials to your chosen combination and turn the outer casing so the indicator is in the open position.

Note: Your chosen combination will continue to operate the lock until it is changed.

FINDING THE CODE


Note This function requires the Code Finding Key (sold separately).


- 1 Insert the Code Finding Key when the indicator is in the locked position.
- 3 Gently rotate each dial upwards until it stops. This is your code.
- 2 Turn the key clockwise 90 dearees.
- 4 Turn the key anticlockwise 90 degrees and remove.

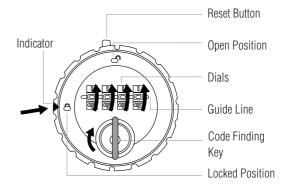


DIMENSIONS

KL10

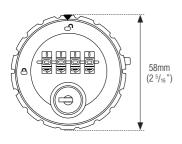

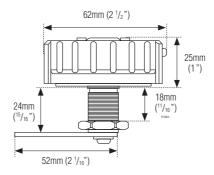

Typical Door Prep.

 

CODELOCKS Ltd. UK CODELOCKS EU B.V. CODELOCKS Inc. US CODELOCKS (Australia) PTY LTD

sales@codelocks.com www.codelocks.com Helpline, service & spares Phone: 0800 393 405

sales@codelocks.eu www.codelocks.eu Helpline, service & spares Phone: +31 53 80 80 118

sales@codelocks.us www.codelocks.us Helpline, service & spares Toll free: 1.877.codelock

sales@codelocks.com.au www.codelocks.com.au Helpline, service & spares Toll free: 1800 052 131

