

MASTER CODE COMMANDS

CHANGE THE MASTER CODE

#Master Code ● 01 ● New Master Code ● New Master Code ● ●

Example: #11335577 ● 01 ● 12345678 ● 12345678 ● ●

Result

Master Code has been changed to 12345678.

SET OR CHANGE THE USER CODE

#Master Code ● 02 ● User Code ● ●

Example: #11335577 ● 02 ● 9999 ● ●

Result

New User Code 9999 now operative.

DELETE USER CODE

#Master Code ● 03 ● ●

Example: #11335577 ● 03 ● ●

Result

User Code deleted.

SET OR CHANGE THE SUB-MASTER CODE

#Master Code ● 04 ● Sub-Master Code ● Sub-Master Code ● ●

Example: #11335577 ● 04 ● 87654321 ● 87654321 ● ●

Result

Sub-Master Code 87654321 now operative.

DELETE SUB-MASTER CODE

#Master Code ● 05 ● 05 ● ●

Example: #11335577 ● 05 ● 05 ● ●

Result

Sub-Master Code deleted.

SUB-MASTER CODE COMMANDS

CHANGE THE SUB-MASTER CODE

#Sub-Master Code ● 06 ● New Sub-Master Code ●

New Sub-Master Code ● ●

Example: #87654321 ● 06 ● 10101010 ● 10101010 ● ●

Result Sub-Master Code has been changed to 10101010.

SET OR CHANGE THE USER CODE

#Sub-Master Code ● 07 ● User Code ● ●

Example: #87654321 ● 07 ● 6666 ● ●

Result New User Code 6666 now operative.

DELETE USER CODE

#Sub-Master Code ● 08 ● ●

Example: #87654321 ● 08 ● ●

Result User Code deleted.

USER CODE COMMANDS

CHANGE THE USER CODE

#User Code ● New User Code ● New User Code ● ●

Example: #2244 ● 6688 ● 6688 ● ●

Result User Code now 6688.

SPECIAL MASTER CODE COMMANDS

SET REPEATED USE MODE A)

#Master Code ● 26 ● ●

Example: #11335577 ● 26 ● ●

Result The lock will revert back to default function **A) repeated use**.
Factory set User Code 2244 will now work repeatedly until reprogrammed.

SET SINGLE USE MODE B) (LOCKER MODE)

#Master Code ● 24 ● ●

Example: #11335577 ● 24 ● ●

Result The lock will now remain open until the next single use code is entered into the lock as follows:

Step 1 – Enter 4 digit code ● Confirm 4 digit code ● ●

Close the locker which will now be **locked**.

Step 2 – Enter the same 4 digit code ● ● the lock will now open and **remain open** until next 4 digit code is entered.

Note: When locked in this mode ● LED will flash every 5 seconds to indicate the locker is locked.


SET TECHNICIAN CODE

#Master Code ● 99 ● Technician Code ● Technician Code ● ●

Example: #11335577 ● 99 ● 555555 ● 555555 ● ●

Result The lock is automatically set into function **B) single use Locker Mode AND** allows the programmed Technician Code to open the lock **WITHOUT** the entered single use code being erased.

Note: If lock is opened with a Master Code the **User Code will be erased**.

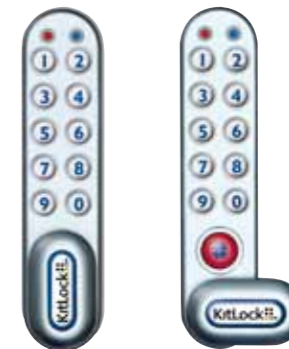

KitLock
Coded Locker Solutions

KITLOCK
1000
ELECTRONIC

**PROGRAMMING
OPERATING
INSTRUCTIONS
FOR VERTICAL
KITLOCK1000**

CODELOCKS LTD UK
Tel: +44 (0) 1635 239645
Fax: +44 (0) 1635 239644
sales@codelocks.co.uk
Helpline, service & spares
FREEPHONE 0800 393 405

CODELOCKS INC US
Tel: +1 714 979 2900
Fax: +1 714 979 2902
sales@codelocks.us
Help: 1.877.CODELOCK

www.codelocks.com

POI-KL1000V-0912



WWW.KITLOCK.COM

CODES - THE BASICS

- The KitLock has four code levels available:
 - Master Code**
 - Sub-Master Code**
 - User Code**
 - Technician Code**
- The KitLock is supplied with two factory set codes:
Master Code: 11 33 55 77
User Code: 22 44
- When fitted **immediately** change the Master Code and User Code.
- All Master Codes and Sub-Master Codes are 8 digits long.
- All User Codes are 4 digits long.
- All technician codes are 6 digits long.
- The lock 'open' time is set at 4 seconds.

FUNCTIONS

Before programming, select the most appropriate function for the application: **A) or B) - See special Master Code set up commands.**

A) REPEATED USE

Important Note: This is the default function and is already pre-programmed in new locks.

This is the most common function and is used where the **same code** will be **repeatedly used.**

B) SINGLE USE (Locker Mode)

The user enters a Single Use Code twice; the second time to confirm the correct code.

This locks the lock. The same code is entered **once only** to open the lock before being erased.

This function is used for short term, multi occupancy applications, e.g. a locker in a leisure centre.

OPERATING INSTRUCTIONS

Note: The KitLock has a 10 button keypad and a # button. The # button is hidden beneath the handle when in the locked position.

The lock has the following code levels:

Master Code can:

Open the lock
Change the Master Code
Set / Change / Delete the Sub-Master and User Code
Select between repeated use and single use codes
Activate/deactivate technician mode

Sub-Master Code can:

Open the lock
Change the Sub-Master
Set / Change / Delete / the User Code

User Code can:

Open the lock
Change the User Code

Technician Code can:

Open the lock

A code cannot be programmed into more than one level

Lost Code Procedure

Note: The procedure requires the door to be open

- Remove the rear-fixing bolt and swing the lock over the edge of the door to reveal the battery compartment.
- Remove one battery.
- Press and hold the 1 button, replace the battery, the blue LED will flash twice, release the 1 button. Within three seconds press the 1 button three times. The blue LED will flash twice and the lock will have reverted to the factory master code 11 33 55 77 and all other stored settings will be erased.

Penalty time


- Entering three incorrect codes will cause the lock into shutdown for 10 seconds.

Battery Power

The KitLock should provide well in excess of 15,000 openings, of 4 seconds each, from 2 x AAA 1.5v cells.

Low Battery

When the battery power is low the Red LED will flash 3 times before the Blue LED flashes to signal acceptance of the code. Batteries should be changed as soon as this happens.
The lock will operate for 100 times with low battery.



Battery failure override

The KitLock has been designed so an external PP3 battery can be placed against the contact points surrounding the Blue and Red LED's so the lock can be opened to replace the batteries should they fail.

The procedure is as follows:

- Place the contact points of the PP3 battery against the contact points surrounding the Blue and Red LED's.
- The positive + PP3 terminal against the Red LED contact point and the negative - PP3 terminal against the Blue LED.
- Enter the Master Code.
- The motor will withdraw the locking pin allowing the lock to be opened.
- Fit new batteries by removing the upper fixing bolt and swinging the lock down over the edge of the door. Refit the lock.

PROGRAMMING

To program – the lock must be in the open position with the # button visible. Every program command must commence by pressing the # button, followed by either the Master Code, Sub-Master Code or User Code.

